 

 

 









 
















Original	Recharge
 Power	 Power
 Input	 AV / Input / RDS
 Netflix	 Shift + Red / Netflix /
 Youtube	 Shift + Yellow / YouTube /
 Subtitles	 Subtitle / EQ
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 <<<	 <<< / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>>	 >>> / Tune+
 Text	 Text / Goto
 Guide	 Guide / EPG / -/--
 Aspect	 Picture / Format
 Up	 Up
 Left	 Left
 OK	 OK

Original	Recharge
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Home	 Menu / Home
 Home	 Shift + Menu /
 Options	 Shift + Setup / OPT / Tools
 Options	 Setup / OPT /
 Vol+	 Vol+
 Vol-	 Vol-
 Google Assist	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Recharge		Original		Recharge	
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
INFO	Info	ANGLE INFO	Info / Angle				
Recall	Recall	PC FAV MARKER	Fav / Marker / PC				
Red	Red	NETFLIX SEARCH	Red / Netflix / Search				
Green	Green	APP REPEAT	Green / APP / Repeat				
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat				
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random				

