 


 



 



 



 



 

 

 

 

 

 

 



 




 


 


 




 






Original	Rechange	Original	Rechange
 Power	 Power	 <</Album	 <<
 Tuner	 Red	 >>/Album	 >>
 AUX	 Green	 DSC	 Up
 Tape	 Yellow	 IS	 Left
 USB	 Blue	 RDS/News	 Right
 CD1	 1	 DIM	 Down
 CD2	 2	 Prog	 Shift + Sleep
 CD3	 3	 Repeat	 Text
 USB Record	 Rec	 Shuffle	 TV/R
 USB Delete	 Exit	 Display	 Info
 Vol-	 Vol -	 Sleep	 Sleep
 Vol+	 Vol +	 Clock Timer	 Shift + AV
 I</Title	 I<<	 Timer On/Off	 AV
 >I/Title	 >>I	 Mute	 Mute
 Stop	 Stop	 DBB	 Media
 Play/Pause	 Play	 Max	 Smart
 Play/Pause	 Pause		

