 


 
 

 
 
 




 


 



 
 
 



 


 

 


 






	Original	Recharge		Original	Recharge
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Shift + Dual
	8		8		Format
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Aspect
	Tv Menu		Menu		Freeze
	Source		AV		USB
	CH List		List		Text





	Original	Rechange	Original	Rechange
	EPG	 Guide		I<<
	FAV	 Pre Ch		>>I
	Info	 Info		Play
	Red	 Red		Pause
	Green	 Green		Stop
	Yellow	 Yellow		Rec/Rep
	Blue	 Blue		
	DTV	 TV/R		
	Hold	 Eject		
	List	 Shift + List		
	Subpage	 Shift + Subt		
	Index	 Smart		
	PVR List	 D. Menu		
	Mix	 Shift + 3D		
	Subtitle	 Subt		
	<<	 <<		
	>>	 >>		

