
 


 


 
 




 



 



 
 


 

 


 


 


 




	Original	Recharge		Original	Recharge
	Power				Exit
	Mute				Up
	1				Down
	2				Right
	3				Left
	4				Ok
	5				Vol +
	6				Vol -
	7				Shift + Dual
	8				Format
	9				Ch +
	0				Ch -
	Audio				Sleep
	Recall				3D
	Tv Menu				Options
	Source				Media
	CH List				Text





	Original	Rechange		Original	Rechange
	EPG	 Guide		I<<	 I<<
	FAV	 Pre Ch		>>I	 >>I
	Info	 Info		Play	 Play
	Red	 Red		Pause	 Pause
	Green	 Green		Stop	 Stop
	Yellow	 Yellow		Rec/Rep	 Rec
	Blue	 Blue			
	DTV	 TV/R			
	Hold	 Eject			
	List	 Shift + List			
	Subpage	 Shift + Subt			
	Index	 Smart			
	PVR List	 D. Menu			
	Mix	 Shift + 3D			
	Subtitle	 Subt			
	<<	 <<			
	>>	 >>			

