




Original	Rechange
 On/Off	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv Guide	 Guide / EPG / -/--
 0	 0
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 Picture	 Picture / Format
 CH+	 CH+ / Page+

Original	Rechange
 Vol-	 Vol-
 Sound	 Sound / Title
 CH-	 CH- / Page-
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 FAV	 Fav / Marker / PC
 Info	 Info / Angle
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 TV	 TV/Radio /





Original	Recharge
 YouTube	 Shift + Yellow / YouTube /
 Netflix	 Shift + Red / Netflix /
 Net+	 D.Menu / Top
 Rec/DVD Menu	 Rec / Rec Mode
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Rec List/DVD	 Shift + Rec / Rec Mode
 << PVR/Media	 << / Tune-
 PVR/Media >>	 >> / Tune+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Red/Goto	 Red / Netflix / Search
 Green/A-B	 Green / APP / Repeat
 Yellow/Angle	 Yellow / YouTube / Repeat
 Blue/Repeat	 Blue / Prime Video / Random

Original	Recharge

