
 












 

 

 

 

 
 




	Original	Recharge	Original	Recharge
	Play	 Play		
	Pause	 Pause		
	Rec	 Rec		
	Stop USB/SD	 Stop		
	Prog	 Sleep		
	Mode	 Smart		
	I<</Skip-	 I<<		
	>>I/Skip+	 >>I		
	<</Folder	 Ch -		
	>>/Folder Up	 Ch +		
	I<</Display	 Info		
	>>/Delete	 Exit		

