



Original	Rechange	Original	Rechange
Power Audio	Power	>>/Slow+	>>
Power Tv	Shift + Power	Stop	Stop
Tv/Video	TV/R	Pause	Pause
Eject	Eject	I<<	I<<
Display	Info	>>I	>>I
Dimmer	Smart	Up/Tuning+	Up
Vol+ Audio	Vol +	Down/Tuning-	Down
Vol- Audio	Vol -	Right/Preset+	Right
CH+ Tv	Ch +	Left/Preset-	Left
CH- Tv	Ch -	Enter	Ok
> USB Memory	Red	Back	Back
FM/AM	Green	Repeat	Text
Line	Yellow	Clock/Timer	Shift + AV
Fade Muting	Mute	Play Tuner	Guide
K2	Blue	I<< Group/Title	Shift + Ch -
Play DVD/CD	Play	>>I Group/Title	Shift + Ch +
<</Slow-	<<	Vol+ Tv	Shift + Right











Original	Rechange
Vol- Tv	Shift + Left
Top Menu/PG	Shift + Menu
Menu/PL	Menu
Audio	Dual
Subtitle	Subt
Zoom	Shift + Eject
Angle	3D
Page	Shift + Media
Return	Shift + Back
Cancel	Exit
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Rechange
8	8
9	9
0	0
10/Tv Return	Shift + Guide
+10/100+	Pre Ch
Set Up	Media
3D Phonic	AV
HP Surround	Shift + Subt
Clear Voice	List
VFP	Options
Scan Mode	Format
QP Link	Shift + Smart
Sleep	Sleep
A.Standby	Shift + Red
Output Level	Shift + 3D
Input Level	Shift + TV/R
S.WFR Out	Shift + Mute





 



 


 
 
 
 



 

 

 
 

 

 







 




Original	Rechange
 DVD Level	 D. Menu
 Treble+	 Shift + 3
 Treble-	 Shift + 6
 Bass+	 Shift + 1
 Bass-	 Shift + 4
 On Screen	 Shift + Info

Original	Rechange





Original		Rechange		Original	Rechange
	Power Tv		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	10/Tv Return		Guide		
	0		0		
	+10/100+		Pre Ch		
	Vol+ Tv		Vol +		
	Vol- Tv		Vol -		
	CH+ Tv		Ch +		
	CH- Tv		Ch -		

