



Original	Rechange
Standby	Power
Equalizzatore	Shift + Sound / Title
Surround	Shift + Eject / Surround
Eject	Eject / Surround
Audio	Audio / Lang I/II
1	1
2	2
3	3
Angle	Info / Angle
4	4
5	5
6	6
Sottotitoli	Subtitle / EQ
7	7
8	8
9	9
Ricerca	Red / Netflix / Search

Original	Rechange
Canc	Exit / Cancel / Clear
0/10	0
10+	Guide / EPG / -/-
Titolo	Sound / Title
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Programm	TV/Radio /
Down	Down
Display	Display / Media
PAL/NTSC	D.Menu / Top
Setup	Setup / OPT /
Digest	Shift + D.Menu / Top Menu
Vol+	Vol+
Mute	Mute / Dimmer





	Original	Recharge	Original	Recharge
	Mark	 Fav / Marker / PC		
	Zoom	 Zoom / Size		
	Vol-	 Vol-		
	A-B	 Yellow / YouTube / Repeat		
	Ripeti	 Back / Return		
	Slow	 Shift + Play /		
	<</F.RWD	 << / Tune-		
	F.FWD/>>	 >> / Tune+		
	l<< / Skip-	 l<< / Preset-		
	>>l / Skip+	 >>l / Preset+		
	Stop	 Stop / Hold		
	Pause/Step	 Pause / Step / Freeze		
	Play	 Play / Slow		

