

 



 
 


 
 




 



 
 
 

 
 
 

 



 
 
 

 

 
 
 

 

 

 

 

 
 


 



 
 


 





 

 
 
 

 
 


 
 




Original		Recharge		Original		Recharge	
	Power		Power		Info		Info
	Mute		Mute		Up		Up
	PP		Pre Ch		Down		Down
	I-II		Dual		Right		Right
	1		1		Left		Left
	2		2		P+		Ch +
	3		3		P-		Ch -
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		Red/Sound		Red
	7		7		Green/Picture		Green
	8		8		Yellow/Feature		Yellow
	9		9		Blue/Install		Blue
	0		0		TV		TV/R
	--		Guide		AV		AV
	P<P		Back		[≡]		Text
	Menu		Menu		[/≡]		Media





Original	Recharge
 [=o]	 AD SUBT Subt
 [=+]	 PICTURE FORMAT Format
 [=x]	 SETTINGS OPT Options
 [=◆]	 ECO 3D 3D
 [=?]	 HOME SMART Smart
 [=i]	 CLEAR EXIT Exit

Original	Recharge

