



Original	Rechange
ON/OFF	Power
Freeview Play	Options
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Mute	Mute
Tv Guide	Guide
Vol+	Vol +
Vol-	Vol -
Picture	Format

Original	Rechange
Sound	Dual
Source	AV
CH+	Ch +
CH-	Ch -
Menu	Menu
Exit	Exit
Back	Back
FAV	Pre Ch
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Info	Info
Text	Text
Subtitle	Subt
TV	TV/R



