



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
--	Shift + Guide / EPG / --
0	0
Back	Back / Return
Text	Text / Goto
Subtitle	Subtitle / EQ
Format	Picture / Format

Original	Rechange
Fav	Fav / Marker / PC
Vol+	Vol+
Page+	Shift + CH+ /
CH+	CH+ / Page+
Vol-	Vol-
Page-	Shift + CH- /
CH-	CH- / Page-
Lang	Audio / Lang I/II
TV/Rad	TV/Radio /
Info	Info / Angle
EPG	Guide / EPG / --
Up	Up
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down





Original		Recharge		Original	Recharge
	Exit		Exit / Cancel / Clear		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue / SOS		Blue / Prime Video / Random		
	Timer		Sleep / Timer		
	Eject		Eject / Surround		
	List		Smart / List		
	II>		Shift + Pause / Step / Step /		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		
	Rec		Rec / Rec Mode		
<< button"/>	<<		<< / Tune-		
	>>		>> / Tune+		
	I<<		I<< / Preset-		
	>>I		>>I / Preset+		

