
















 



 













 

 









 





 




 













Original		Rechange		Original		Rechange	
	Power On		Power		Vol-		Vol -
	Power Off		Shift + Power		Mute		Mute
	1		1		FRQ Direct		Play
	2		2		Tune		I<<
	3		3		Preset		>>I
	4		4		FM Mono		Pause
	5		5		Band		Stop
	6		6		Center		Yellow
	7		7		Swoofers		Red
	8		8		Surround		Green
	9		9		Menu		Menu
	0		0		Up		Up
	Ten/+10		Guide		Down		Down
	Memory		Pre Ch		+ / Forward		Right
	CH+		Ch +		- / Back		Left
	CH-		Ch -		Enter		Ok
	Vol+		Vol +		CD		Shift + 1





Original		Rechange		Original		Rechange	
	Tun	+	Shift + 2		7 CH		Subt
	Tape	+	Shift + 3		Display		Info
	EXT	+	Shift + 4		Tape 2		Exit
	V1/DVD	+	Shift + 5		Phono		Back
	V2	+	Shift + 6		Tone		Text
	V3	+	Shift + 7		D-SLT		D. Menu
	V4	+	Shift + 8		Scan	+	Shift + Play
	V5	+	Shift + 9		PTY		<<
	EQ		Smart		P-Tun		>>
	DYN		Media		TP	+	Shift + Pause
	Rec		Rec		TA	+	Shift + Stop
	Zone	+	Shift + Smart		Aspect		Format
	Sur+	+	Shift + Media		Disp	+	Shift + Info
	2 CH		List		PIP		Sleep
	PL C		Options		POP		TV/R
	PL M		3D		Output		AV
	5 CH		Dual		Power		Blue





Original		Recharge		Original		Recharge	
	Power On		Power		Play		Play
	Power Off		Shift + Power		I<<		I<<
	1		1		>>I		>>I
	2		2		Pause		Pause
	3		3		Stop		Stop
	4		4		Menu		Menu
	5		5		Up		Up
	6		6		OSD		Back
	7		7		Down		Down
	8		8		-/Back		Left
	9		9		-/Back		<<
	0		0		+/Forward		Right
	Ten (+10)		Guide		+/Forward		>>
	Clear (X)		Exit		Enter		Ok
	Vol+		Vol +		Search-		Ch -
	Vol-		Vol -		Search+		Ch +
	Mute		Mute		Random (DYN)		TV/R





 














 

 





 










 



 



 


 




 
 


 
 

 
 
 
 

 




Original		Recharge		Original		Recharge	
	PAL (Rec)		Format		Goto		Shift + Left
	HD Mode		3D		Power		Blue
	DIM (SUR+)		AV				
	Prog (2CH)		Sleep				
	Screen (PL C)		Smart				
	Title (PL M)		Media				
	Prog-Scan		Options				
	Open (7CH)		Eject				
	Display		Info				
	Audio		Dual				
	Angle		List				
	Subtitle		Subt				
	Zoom		Shift + Eject				
	Resume		Shift + Right				
	Repeat		Text				
	A-B		D. Menu				
	Slow		Shift + Play				





Original		Rechange		Original		Rechange	
	Power On		Power		I<<		I<<
	Power Off		Shift + Power		>>I		>>I
	1		1		Pause		Pause
	2		2		Stop		Stop
	3		3		Open (ENT)		Ok
	4		4		Open (ENT)		Eject
	5		5		Search-		Ch -
	6		6		Search+		Ch +
	7		7		Disc 1		Shift + 1
	8		8		Disc 2		Shift + 2
	9		9		Disc 3		Shift + 3
	0		0		Disc 4		Shift + 4
	TEN (+10)		Guide		Disc 5		Shift + 5
	Vol+		Vol +		Program (2CH)		Sleep
	Vol-		Vol -		Random (PL C)		TV/R
	Mute		Mute		Repeat (PL M)		Text
	Play		Play		Disc+ (7CH)		>>





	Original	Recharge	Original	Recharge
DISPLAY DISP	Display (DISP)	INFO		Info
RESUME SCAN	Scan	HOME SMART		Smart
REPEAT PTY	Time (PTY)	FAV PRE-CH		Pre Ch
A - B P-TUN	A-B (P-Tun)	E-MANUAL D.MENU		D. Menu
GOTO TP	Review (TP)	APP MEDIA		Media
SLOW TA	Clear (TA)	CLEAR EXIT		Exit
RECORD POWER	Power	D		Blue

