












 





 
















| Original     | Rechange  | Original   | Rechange   |
|--------------|---|------------|--|
| On/Off       |  Power                 | Store Text |  Setup / OPT /          |
| Mute         |  Mute / Dimmer         | Text       |  Text / Goto            |
| Update       |  Play / Slow           | TV/AV      |  AV / Input / RDS       |
| Reveal       |  Pause / Step / Freeze | Menu       |  Menu / Home            |
| Txt Stop     |  Stop / Hold           | Menu Up    |  Up                     |
| Tone-        |  << / Tune-            | Info       |  Info / Angle           |
| Tone+        |  >> / Tune+            | Menu Left  |  Left                   |
| Contrast-    |  I<< / Preset-         | OK Enter   |  OK                     |
| Contrast+    |  >>I / Preset+         | Menu Right |  Right                  |
| Color- S.Std |  Sound / Title        | Menu Off   |  Exit / Cancel / Clear |
| Menu audio   |  Audio / Lang I/II   | Menu Down  |  Down                 |
| Subt.List    |  Subtitle / EQ       | Back       |  Back / Return        |
| 4.# 16:9     |  Picture / Format    | Volume+    |  Vol+                 |
| Txt Expand   |  Zoom / Size         | Chan.Up    |  CH+ / Page+          |
| Sleep Timer  |  Sleep / Timer       | Volume-    |  Vol-                 |
| Return TV    |  TV/Radio /          | Display    |  Display / Media      |
| Menu video   |  D.Menu / Top        | Chan.Down  |  CH- / Page-          |



