 

























Original	Rechange	Original	Rechange
Standby	Power	0	0
Open/Close	Eject / Surround	Title	Sound / Title
Audio	Audio / Lang I/II	Up	Up
1	1	Menu	Menu / Home
2	2	Left	Left
3	3	OK	OK
Angle	Info / Angle	Right	Right
4	4	Display	Display / Media
5	5	Down	Down
6	6	Video Out	AV / Input / RDS
Subtitle	Subtitle / EQ	Return	Back / Return
7	7	Setup	Setup / OPT /
8	8	Mode	D.Menu / Top
9	9	Vol+	Vol+
Search	Red / Netflix / Search	Mute	Mute / Dimmer
PRG	TV/Radio /	Mark	Fav / Marker / PC
CLR	Exit / Cancel / Clear	Zoom	Zoom / Size





Original		Recharge		Original		Recharge	
	Vol-		Vol-				
	A-B		Yellow / YouTube / Repeat				
	SlowR		CH- / Page-				
	SlowF		CH+ / Page+				
	<<		<< / Tune-				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Stop		Stop / Hold				
	Pause/Step		Pause / Step / Freeze				
	Play		Play / Slow				

