



Original	Recharge
Power TV-SAT	Power
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
Menu	Menu
Guide	Guide
Exit	Exit
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Recharge
9	9
0	0
Volume+ Tv	Vol +
Volume- Tv	Vol -
CH+ Tv Control	Ch +
CH- Tv Control	Ch -
TV/SAT	Media
Front	Smart
Power Front	Shift + Power
Play Front	Play
>> Front button"/> >> Front	>>
<< Front button"/> << Front	<<
Pause Front	Pause
Stop Front	Stop
Enter Down	3D
Input Select	AV
1 Front	Shift + 1





Original	Recharge
2 2 Front	SHIFT + 2 Shift + 2
3 3 Front	SHIFT + 3 Shift + 3
4 4 Front	SHIFT + 4 Shift + 4
5 5 Front	SHIFT + 5 Shift + 5
6 6 Front	SHIFT + 6 Shift + 6
7 7 Front	SHIFT + 7 Shift + 7
8 8 Front	SHIFT + 8 Shift + 8
9 9 Front	SHIFT + 9 Shift + 9
0 0 Front	SHIFT + 0 Shift + 0
+ CHANNEL Channel+ Front	SHIFT + + CH Shift + Ch +
- CHANNEL Channel- Front	SHIFT + - CH Shift + Ch -

Original	Recharge








 

 
 

 
 




 


 

 

Original	Rechange
Power DVD	Power
Master	Vol +
Master Volume-	Vol -
Mute	Mute
Menu	Menu
Top Menu	Shift + Menu
Subtitle	Subt
Audio	Dual
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
Play	Play
<<	<<
>>	>>
I<<	I<<

Original	Rechange
Pause	Pause
Stop	Stop
>>I	>>I
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
·/+10	Pre Ch





Original	Rechange
 Power FM-AM	 Power
 Master	 Vol +
 Master Volume-	 Vol -
 Mute	 Mute
 Display	 Info
 T.Edit	 Smart
 RF ATT	 Media
 EON	 List
 Tune+	 Up
 Tune-	 Down
 ST+	 Right
 ST-	 Left
 Enter	 Ok
 D.Access	 Blue
 MPX	 Yellow
 Class	 Green
 Search	 TV/R

Original	Rechange
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0






 




Original	Recharge
Power Receiver	Power
Signal Select	Smart
Power DVR-VCR	Shift + Power
DVD	Shift + 1
TV/SAT	Shift + 5
Front	Shift + 4
Sleep	Sleep
DVR/VCR	Shift + 2
FM/AM	Shift + 3
Dimmer	Media
Auto	D. Menu
Surround	Dual
Advanced	Subt
Sound Mode	Format
Setup	Options
Test Tone	Text
CH. Select	3D

Original	Recharge
Room Setup	Red
Mute	Mute
-	Green
+	Yellow
Enter (Up)	Shift + Pre Ch
Master Volume-	Vol -
Master	Vol +
P+	Ch +
Up/Tune+	Up
Menu	Menu
Left/ST-	Left
Enter	Ok
Right/ST+	Right
P-	Ch -
Down/Tune-	Down
Guide	Guide
<<	<<





Original	Rechange
 Play	 Play
 >>/A	 >>
 I<</B	 I<<
 Pause/C	 Pause
 Stop/D	 Stop
 >>/E	 >>I
 1	 1
 2	 2
 3	 3
 Enter Down	 AV
 4	 4
 5	 5
 6	 6
 7	 Pre Ch
 8	 8
 9	 9

Original	Rechange
 0	 0
 Channel+	 Shift + Ch +
 Channel-	 Shift + Ch -

