



Original	Recharge
Power TV-SAT	Power
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
Menu	Menu
Guide	Guide
Exit	Exit
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Recharge
9	9
0	0
Volume+ Tv	Vol +
Volume- Tv	Vol -
CH+ Tv Control	Ch +
CH- Tv Control	Ch -
TV/SAT	Media
Front	Smart
Power Front	Shift + Power
Play Front	Play
>> Front button"/> >> Front	>>
<< Front button"/> << Front	<<
Pause Front	Pause
Stop Front	Stop
Enter Down	3D
Input Select	AV
1 Front	Shift + 1











 

 








 







 
 
 
Original	Recharge
2 2 Front	SHIFT + 2 Shift + 2
3 3 Front	SHIFT + 3 Shift + 3
4 4 Front	SHIFT + 4 Shift + 4
5 5 Front	SHIFT + 5 Shift + 5
6 6 Front	SHIFT + 6 Shift + 6
7 7 Front	SHIFT + 7 Shift + 7
8 8 Front	SHIFT + 8 Shift + 8
9 9 Front	SHIFT + 9 Shift + 9
0 0 Front	SHIFT + 0 Shift + 0
+ Channel+ Front	SHIFT + + Shift + Ch +
- Channel- Front	SHIFT + - Shift + Ch -

Original	Recharge






 



 
 

 



 


 

 
Original	Rechange
 Power DVD	 Power
 Master	 Vol +
 Master Volume-	 Vol -
 Mute	 Mute
 Menu	 Menu
 Top Menu	 Shift + Menu
 Subtitle	 Subt
 Audio	 Dual
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play	 Play
 <<	 <<
 >>	 >>
 I<<	 I<<

Original	Rechange
 Pause	 Pause
 Stop	 Stop
 >>I	 >>I
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ·/+10	 Pre Ch





Original	Rechange
 Power FM-AM	 Power
 Master	 Vol +
 Master Volume-	 Vol -
 Mute	 Mute
 Display	 Info
 T.Edit	 Smart
 RF ATT	 Media
 EON	 List
 Tune+	 Up
 Tune-	 Down
 ST+	 Right
 ST-	 Left
 Enter	 Ok
 D.Access	 Blue
 MPX	 Yellow
 Class	 Green
 Search	 TV/R

Original	Rechange
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0






 




Original	Rechange
 Power Receiver	 Power
 Signal Select	 Smart
 Power DVR-VCR	 Shift + Power
 DVD	 Shift + 1
 TV/SAT	 Shift + 5
 Front	 Shift + 4
 Sleep	 Sleep
 DVR/VCR	 Shift + 2
 FM/AM	 Shift + 3
 Dimmer	 Media
 Auto	 D. Menu
 Surround	 Dual
 Advanced	 Subt
 Sound Mode	 Format
 Setup	 Options
 Test Tone	 Text
 CH. Select	 3D

Original	Rechange
 Room Setup	 Red
 Mute	 Mute
 -	 Green
 +	 Yellow
 Enter (Up)	 Shift + Pre Ch
 Master Volume-	 Vol -
 Master	 Vol +
 P+	 Ch +
 Up/Tune+	 Up
 Menu	 Menu
 Left/ST-	 Left
 Enter	 Ok
 Right/ST+	 Right
 P-	 Ch -
 Down/Tune-	 Down
 Guide	 Guide
 <<	 <<





Original	Rechange
 Play	 Play
 >>/A	 >>
 I<</B	 I<<
 Pause/C	 Pause
 Stop/D	 Stop
 >>/E	 >>I
 1	 1
 2	 2
 3	 3
 Enter Down	 AV
 4	 4
 5	 5
 6	 6
 +10	 Pre Ch
 7	 7
 8	 8
 9	 9

Original	Rechange
 0	 0
 Channel+	 Shift + Ch +
 Channel-	 Shift + Ch -

