
 


 
 





 


 


 
 
 

 







 

 







 









 

 

 








Original	Rechange
 Power	 Power
 Mute	 Mute
 Set	 Media
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Home	 Smart
 Pause	 Pause
 Play	 Play
 Back	 Back
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok

Original	Rechange
 Vol+	 Vol +
 Vol-	 Vol -
 On Page	 TV/R
 Next Page	 Options
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Delete	 Guide





Original		Recharge		Original		Recharge	
# 输入法	Input	TIMER AV	AV				

