



 



 



 


 

 



 



 











 

 

 

 









Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 Lang	 Audio / Lang I/II
 [≡]..	 Subtitle / EQ
 Text	 Text / Goto
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK

Original	Recharge
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 ←	 Back / Return
 V+	 Vol+
 Smart	 Smart / List
 P+	 CH+ / Page+
 V-	 Vol-
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original	Recharge	Original	Recharge
9 WXYZ	9	BLUETOOTH 9	9
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--
0 ()	0	HDMI - BAT 0	0
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random
Home	Home	SHIFT + HOME MENU	Shift + Menu /
NETFLIX	Netflix	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
YouTube	YouTube	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /

Original	Recharge

