







 

 



 

 

 



 

 



 







 





















 

 

 









Original	Rechange	Original	Rechange
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	[≡]..		Subtitle / EQ
	Text		Text / Goto
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	←		Back / Return
	V+		Vol+
	Smart		Smart / List
	P+		CH+ / Page+
	V-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Original		Recharge		Original	Recharge
	9		9		
	Guide		Guide / EPG / -/--		
	0		0		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Home		Shift + Menu /		
	Netflix		Shift + Red / Netflix /		
	YouTube		Shift + Yellow / YouTube /		

