




 



 
 


 







 



 







 
 






 









 



 





 








 
 

 
 






 








 







 

 







Original	Rechange	Original	Rechange
 Power	 Power	 3 / Disc 3	 3
 AUX	 Shift + 1	 4 / Disc 4	 4
 AUX	 Red	 5 / Disc 5	 5
 TUNER / BAND	 Shift + 2	 6	 6
 TUNER / BAND	 Shift + TV/R	 7	 7
 TUNER / BAND	 Green	 8	 8
 DVD / CD	 Shift + 3	 9	 9
 DVD / CD	 Blue	 0	 0
 TV	 Yellow	 ≥10 / -/-	 Guide
 TV	 Shift + 4	 Disc	 Pre Ch
 TV	 TV/R	 Pause	 Pause
 VCR	 Shift + 5	 << Slow/Search	 <<
 Volume+	 Vol +	 Slow/Search >>	 >>
 Volume-	 Vol -	 Play	 Play
 Muting	 Mute	 I<< Skip	 I<<
 1 / Disc 1	 1	 Stop	 Stop
 2 / Disc 2	 2	 Skip >>I	 >>I





Original	Rechange	Original	Rechange
 Power	 Power	 Play	 Play
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 ≥10 / -/--	 -/--		
 CH+	 + CH		
 CH-	 - CH		
 Stop	 Stop		
 <<	 <<		
 >>	 >>		

