
 
 



 
 
 
 
 






 



 
 


 

 


 






 




 
 

 


 





 



Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Info	 +  Shift + Info	Back	 Back
Txt Stop	 Stop	Volume+	 Vol +
Subt.List	 Subt	Menu audio	 Dual
Sleep Timer	 Sleep	Chan.Up	 Ch +
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Rechange	Original	Rechange
8	 8	4.# 16:9	 Format
9	 9	Contrast+	 +  Shift + Ch +
Guide -/-- 1.	 GUIDE	Color- S.Std	 I<<
0/10	 0	Bright- Sys	 <<
2.Fav P/C 2.	 PRE-CH	Contrast-	 +  Shift + Ch -
Red	 A	Surround	 +  Shift + Red
Green	 B	Nicam/Mono	 +  Shift + Green
Off/Tim	 LIST	Level L	 +  Shift + Yellow
Mix Scan	 3D	Level R/Woofer	 +  Shift + Blue
Yellow	 C		
Audio+	 OPT		
Blue	 D		
Disp	 +  Shift + AV		
Aft/Caf	 +  Shift + Ok		
Color+ P.Std	 >>I		
Search	 +  Shift + TV/R		
Bright+ Mode	 >>		

