





Original	Rechange	Original	Rechange
 Power	 Power	 Pause	 Pause
 CH/Page+	 Ch +	 Stop	 Stop
 CH/Page-	 Ch -	 Home	 Smart
 Sleep	 Sleep	 >>I/Tune+	 >>I
 Mute	 Mute	 I<</Tune-	 I<<
 Volume+	 Vol +	 >>	 >>
 Volume-	 Vol -	 <<	 <<
 Info	 Info	 Green/Movie	 Green
 Option	 Options	 Red/Music	 Red
 Setup	 Menu	 Blue/Game	 Blue
 Back	 Back	 Yellow/Pure	 Yellow
 Up	 Up	 1	 1
 Enter	 Ok	 2	 2
 Down	 Down	 3	 3
 Right	 Right	 4	 4
 Left	 Left	 5	 5
 Play	 Play	 6	 6




 

 

 



 
 
 

 

 

 


Original	Recharge
 7	 7
 8	 8
 9	 9
 0	 0
 Smart Select 1	 Text
 Smart Select 2	 AV
 Smart Select 3	 Format
 Smart Select 4	 3D
 TV Audio	 TV/R
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 Blu-ray	 Shift + 3
 AUX1	 Shift + 4
 Tuner	 Shift + 5
 Bluetooth	 Shift + 6
 Game	 Shift + 7
 Phono	 Shift + 9

Original	Recharge
 AUX2	 Shift + 8
 USB	 Guide
 Media Player	 Shift + Guide
 Internet Radio	 Pre Ch
 CD	 Shift + 0
 Heos (Online)	 Shift + Pre Ch





Original	Rechange	Original	Rechange
 Power	 Power	 >>	 >>
 CH/Page+	 Ch +	 <<	 <<
 CH/Page-	 Ch -	 >> /Tune+	 >>
 Sleep	 Sleep	 <</Tune-	 <<
 Mute	 Mute	 1	 1
 Volume+	 Vol +	 2	 2
 Volume-	 Vol -	 3	 3
 Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Home	 Smart	 0	 0
 Stop	 Stop	 Smart Select 1	 Text
 Pause	 Pause	 Smart Select 2	 AV
 Play	 Play	 Smart Select 3	 Format



 






 

 
 
 



 






 

 





 
 
 











 













 






Original		Rechange		Original		Rechange	
	Smart Select 4		3D				
	TV Audio		TV/R				
	Media Player		Shift + GUIDE				
	Internet Radio		Pre Ch				
	CBL/SAT		Shift + 1				
	DVD		Shift + 2				
	Blu-ray		Shift + 3				
	AUX1		Shift + 4				
	Tuner		Shift + 5				
	Bluetooth		Shift + 6				
	Game		Shift + 7				
	AUX2		Shift + 8				
	Phono		Shift + 9				
	USB		Guide				
	CD		Shift + 0				
	Online Music		Shift + Pre Ch				





Original	Rechange	Original	Rechange
 Power	 Power	 >> /Tune+	 >>
 CH/Page+	 Ch +	 <</Tune-	 <<
 CH/Page-	 Ch -	 <<	 <<
 Sleep	 Sleep	 >>	 >>
 Mute	 Mute	 1	 1
 Volume+	 Vol +	 2	 2
 Volume-	 Vol -	 3	 3
 Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Home	 Smart	 0	 0
 Stop	 Stop	 Smart Select 1	 Text
 Pause	 Pause	 Smart Select 2	 AV
 Play	 Play	 Smart Select 3	 Format





Original	Recharge	Original	Recharge
 Smart Select 4	 3D		
 TV Audio	 TV/R		
 Media Player	 Shift + Guide		
 Internet Radio	 Pre Ch		
 CBL/SAT	 Shift + 1		
 DVD	 Shift + 2		
 Blu-ray	 Shift + 3		
 AUX1	 Shift + 4		
 Tuner	 Shift + 5		
 Bluetooth	 Shift + 6		
 Game	 Shift + 7		
 AUX2	 Shift + 8		
 Phono	 Shift + 9		
 USB	 Guide		
 CD	 Shift + 0		
 Online Music	 Shift + Pre Ch		

Original	Recharge

