 

 

 
 


 

 


 






 




 




 
 

 




 
 
 
 


 






 


 
 
 
 




	Original	Rechange	Original	Rechange
	Power			>>I
	Eject			Pause/Step
	1			Play
	2			Stop
	3			Up
	4			PR/TRK+
	5			PR/TRK-
	6			Down
	7			Right
	8			Left
	9			OK/Enter
	0			Display/CLK/CN
	Tv/VCR			i/Setup
	AV			Disc Menu
	<<			Return
	>>			O)/Audio
	I<<			[...]/Subtitle
				Ok
				3D
				Info
				D. Menu
				Back
				Dual
				Subt





 




 
 






 


 


 



 







 
 

 














 
 



	Original	Recharge
ANGLE	Camera/Angle	A Red
ZOOM	Zoom	SHIFT + ZOOM Shift + Eject
REC/ITR	Rec/ITR	REC MODE Rec
LOCK	Lock	FAV PRE-CH Pre Ch
TITLE	Title	GUIDE Guide
PROGRAM	Program	PROG SLEEP Sleep
MARKER	Marker	B Green
SEARCH	Search	SHIFT + SEARCH TV/R Shift + TV/R
CLEAR	Clear	CLEAR EXIT Exit
REPEAT	Repeat	REPEAT TEXT Text
A-B/LP	A-B/LP	C Yellow
RANDOM	Random/CM	D Blue
SHOWVIEW	ShowView	APP MEDIA Media
TV POWER	Power Tv	SHIFT + POWER Shift + Power
*	*	SHIFT + ECO 3D Shift + 3D
AV	AV Tv	SHIFT + TIMER AV Shift + AV
PR+	PR+ Tv	SHIFT + + CH Shift + Ch +

	Original	Recharge
PR-	PR- Tv	SHIFT + CH - Shift + Ch -
Vol+	Vol+ Tv	+ VOL Vol +
Vol-	Vol- Tv	VOL - Vol -





	Original	Rechange	Original	Rechange
	Power			>>I
	Open/Close			Pause/Step
	1			Play
	2			Stop
	3			Display/CLK/CN
	4			i/Setup
	5			Disc Menu
	6			Return
	7			Up
	8			PR/TRK+
	9			PR/TRK-
	0			Down
	Tv/VCR			Right
	AV			Left
	<<			OK/Enter
	>>			O)/Audio
	I<<			[...]/Subtitle
				Ok
				Dual
				Subt





Original	Recharge
ANGLE Camera/Angle	A Red
ZOOM Zoom	SHIFT + ZOOM Shift + Eject
REC/ITR Rec/ITR	REC MODE Rec
LOCK Lock	FAV PRE-CH Pre Ch
TITLE Title	GUIDE Guide
PROGRAM Program	PROG SLEEP Sleep
MARKER Marker	B Green
SEARCH Search	SHIFT + SEARCH TV/R Shift + TV/R
CLEAR Clear	CLEAR EXIT Exit
REPEAT Repeat	REPEAT TEXT Text
A-B/LP A-B/LP	C Yellow
RANDOM Random/CM	D Blue
SHOWVIEW ShowView	APP MEDIA Media
*	SHIFT + ECO 3D Shift + 3D
Power Tv	SHIFT + POWER Shift + Power
VOL+ Tv	+ VOL Vol +
VOL- Tv	- VOL Vol -

Original	Recharge
PR+ Tv	SHIFT + + CH Shift + Ch +
PR- Tv	SHIFT + - CH Shift + Ch -
AV Tv	SHIFT + TIMER AV Shift + AV

