 



 



 



 


 
 




 

 
 












 

 







 






 
 
 
 
 

 

 

 







Original		Rechange		Original		Rechange	
	Power		Power		TV/Radio		TV/R
	Mute		Mute		Menu		Menu
	UHF		Smart		Back		Back
	Pause		Pause		Exit		Exit
	EPG		Guide		Info		Info
	A-Z		Media		Up / CH+		Up
	FAV		Pre Ch		Up / CH+		Ch +
	1		1		Down / CH-		Down
	2		2		Down / CH-		Ch -
	3		3		Right / Vol+		Right
	4		4		Right / Vol+		Vol +
	5		5		Left / Vol-		Left
	6		6		Left / Vol-		Vol -
	7		7		OK		Ok
	8		8		Red / FTA/CAS		Red
	9		9		Green / SAT		Green
	0		0		Yellow / TV/SAT		Yellow





Original		Rechange		Original		Rechange	
	Blue / A/V		Blue				
	Page+ / +100		>>				
	Page- / -100		<<				
	-		<<				
	+		>>				
	F1 / Zoom		Eject				
	F2 / Sleep		Sleep				
	F3 / PIP		Format				
	F4 / Back		Options				
	F1 / Zoom		Shift + 1				
	F2 / Sleep		Shift + 2				
	F3 / PIP		Shift + 3				
	F4 / Back		Shift + 4				
	Text		Text				
	Subtitle		Subt				

