



Original		Rechange		Original		Rechange	
	Power		Power		8		8
	Setup		Options		9		9
	DSK		Format		0		0
	HDMI/AV		AV		Vol+		Vol +
	Edit		D. Menu		Vol-		Vol -
	Copy		Guide		Mute		Mute
	Movie		Red		Up		Up
	Photo		Green		Down		Down
	Music		Yellow		Right		Right
	DIR		Blue		Left		Left
	1		1		Enter		Ok
	2		2		Repeat		Text
	3		3		Step		3D
	4		4		Pause		Pause
	5		5		Play		Play
	6		6		Stop		Stop
	7		7		>>		>>





	Original	Rechange	Original	Rechange
REV	<<	<<		<<
PG.DN	>>	>>		>>
PG.UP	<<	<<		<<
AUDIO	Audio	SOUND DUAL		Dual
SUB-T	Sub-T	AD SUBT		Subt
PSM	PSM	DISC NAV LIST		List
INFO	Info	DISPLAY INFO		Info
HOME	Home	HOME SMART		Smart
EXIT	Exit	CLEAR EXIT		Exit
S.SHOW	S.Show	FAV PRE-CH		Pre Ch
DVD	DVD	APP MEDIA		Media

