


















 
 
 

 








 





| Original | Recharge |
|--|---|
|  Power |  Power |
|  Night Mode |  Rec |
|  Tuner Menu |  Menu |
|  Dynamic Bass |  List |
|  Sleep |  Sleep |
|  Sound Field- |  Ch - |
|  Sound Field+ |  Ch + |
|  Muting |  Mute |
|  DVD Menu |  D. Menu |
|  Clear |  Exit |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |

| Original | Recharge |
|--|---|
|  8 |  8 |
|  9 |  9 |
|  10/0 |  0 |
|  >10 |  Guide |
|  Function |  Smart |
|  Display |  Info |
|  DVD Setup |  Options |
|  Subtitle |  Subt |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  Return |  Back |
|  Tv/Video |  TV/R |





| | Original | Rechange | Original | Rechange |
|--|---------------|--------------|----------|----------|
| | Dimmer | Format | | |
| | Pause | Pause | | |
| | Play/Select | Play | | |
| | Stop | Stop | | |
| | <</Tuning-/<I | << | | |
| | Tuning+/Slow | >> | | |
| | >>I/Preset+ | >>I | | |
| | I<</Preset- | I<< | | |
| | Audio | Dual | | |
| | Repeat | Text | | |
| | DVD Display | Media | | |
| | Enter | Pre Ch | | |
| | DVD Top Menu | Shift + Menu | | |
| | Band | 3D | | |
| | Angle | Green | | |
| | Play Mode | Shift + Play | | |



