



Original	Rechange	Original	Rechange
Open/Close	Eject / Surround	4	4
Power	Power	5	5
Stereo/Mono	Shift + Audio / Lang I/II	6	6
Name	Text / Goto	Band	TV/Radio /
Dimmer	Shift + Mute / Dimmer	Angle	Info / Angle
Repeat	Green / APP / Repeat	7	7
Tv/Video	AV / Input / RDS	8	8
Clear	Exit / Cancel / Clear	9	9
Memory	Rec / Rec Mode	Sound Field	Sound / Title
Time	Sleep / Timer	Subtitle	Subtitle / EQ
Muting	Mute / Dimmer	>10 button"/> >10	Guide / EPG / -/-
Play Mode	Shift + Play /	10/0	0
1	1	Enter	Fav / Marker / PC
2	2	Display	Display / Media
3	3	Vol+	Vol+
Function	Smart / List	Vol-	Vol-
Audio	Audio / Lang I/II	I<</Preset-	I<< / Preset-





