



 
















 
 
 















 


















Original	Rechange
 Power	 Power
 Open / Close	 Eject
 TV	 Smart
 Video	 AV
 DVD	 Media
 TTX	 Text
 Setup	 Options
 Title	 List
 Menu	 Menu
 Display	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Rechange
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 PRE	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Prog+	 Ch +
 Prog-	 Ch -
 M/S	 TV/R
 Skip	 Shift + Right
 Sleep	 Sleep
 TV. Menu	 D. Menu
 P.STD	 Format
 S.STD	 Dual
 Up	 Up
 Left	 Left





Original	Rechange
 Enter	 Ok
 Right	 Right
 Down	 Down
 P.Size	 Shift + Format
 Exit / Cancel	 Exit
 Mute	 Mute
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 << / <I Slow	 <<
 >> / Slow I>	 >>
 I<< / <II Step	 I<<
 >>I / Step II>	 >>I
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Rechange
 Mix / A-B	 3D
 Index / Repeat	 Shift + Text
 L/F / Audio	 Shift + Dual
 Size / Subtitle	 Subt
 Reveal / Goto	 Shift + Smart
 Holds / Program	 Shift + Sleep
 Prepage / Angle	 Shift + Ch -
 Nextpage / Surr	 Shift + Ch +
 Store / Clear	 Shift + Exit
 Subpage /	 Shift + Eject

