



Original	Recharge
 Power	 Power
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 Tv Audio	 Dual
 Blu-ray	 Shift + 3
 AUX	 Shift + 4
 Tuner	 Shift + 5
 Bluetooth	 Shift + 6
 Game	 Shift + 7
 8K	 Shift + 8
 Phono	 Shift + 9
 USB	 Pre Ch
 Media Player	 Media
 CD	 Guide
 Heos	 Shift + 0
 Internet Radio	 TV/R
 CH/Page+	 Ch +

Original	Recharge
 CH/Page-	 Ch -
 Sleep	 Sleep
 Eco	 3D
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Option	 Options
 Back	 Back
 Setup	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Home	 Smart
 Stop	 Stop





Original		Rechange		Original		Rechange	
	Pause		Pause		4		4
	Play		Play		5		5
	I<</Tune-		I<<		6		6
	>>I/Tune+		>>I		7		7
	<<		<<		8		8
	>>		>>		9		9
	Smart Select 1		D. Menu		0		0
	Smart Select 2		Text				
	Smart Select 3		Eject				
	Smart Select 4		AV				
	Green/Movie		Green				
	Red/Music		Red				
	Blue/Game		Blue				
	Yellow/Pure		Yellow				
	1		1				
	2		2				
	3		3				





Original	Rechange	Original	Rechange
 Power	 Power	 Stop	 Stop
 1	 1	 Pause	 Pause
 2	 2	 Play	 Play
 3	 3	 >>	 >>
 4	 4	 <<	 <<
 5	 5	 >> Tune+	 >>
 6	 6	  <</Tune-	  <<
 7	 7	 Smart Select 1	 D. Menu
 8	 8	 Smart Select 2	 Text
 9	 9	 Smart Select 3	 Eject
 0	 0	 Smart Select 4	 AV
 Up	 Up	 CH/Page+	 Ch +
 Enter	 Ok	 CH/Page-	 Ch -
 Down	 Down	 Sleep	 Sleep
 Right	 Right	 Mute	 Mute
 Left	 Left	 Back	 Back
 Home	 Smart	 Vol+	 Vol +











 



 
 
 



 




 



 

 

 
 
 

 


Original	Recharge	Original	Recharge
	Vol-		Vol -
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Blu-ray		Shift + 3
	AUX		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	8K		Shift + 8
	Phono		Shift + 9
	Media Player		Media
	Internet Radio		TV/R
	CD		Guide
	USB		Pre Ch
	TV Audio		Shift + 0
			Dual

Original	Recharge





Original	Rechange	Original	Rechange
 Power	 Power	 Smart Select 2	 Text
 1	 1	 Smart Select 3	 Eject
 2	 2	 Smart Select 4	 AV
 3	 3	 Back	 Back
 4	 4	 CH/Page+	 Ch +
 5	 5	 CH/Page-	 Ch -
 6	 6	 Mute	 Mute
 7	 7	 Sleep	 Sleep
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 CBL/SAT	 Shift + 1
 Up	 Up	 DVD	 Shift + 2
 Enter	 Ok	 Blu-ray	 Shift + 3
 Down	 Down	 AUX	 Shift + 4
 Right	 Right	 Tuner	 Shift + 5
 Left	 Left	 Bluetooth	 Shift + 6
 Smart Select 1	 D. Menu	 Game	 Shift + 7

Original	Rechange	Original	Rechange
 Power	 Power	 Smart Select 2	 Text
 1	 1	 Smart Select 3	 Eject
 2	 2	 Smart Select 4	 AV
 3	 3	 Back	 Back
 4	 4	 CH/Page+	 Ch +
 5	 5	 CH/Page-	 Ch -
 6	 6	 Mute	 Mute
 7	 7	 Sleep	 Sleep
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 CBL/SAT	 Shift + 1
 Up	 Up	 DVD	 Shift + 2
 Enter	 Ok	 Blu-ray	 Shift + 3
 Down	 Down	 AUX	 Shift + 4
 Right	 Right	 Tuner	 Shift + 5
 Left	 Left	 Bluetooth	 Shift + 6
 Smart Select 1	 D. Menu	 Game	 Shift + 7





Original	Recharge	Original	Recharge
	8K SHIFT +  Shift + 8		
	Phono SHIFT +  Shift + 9		
	USB FAV PRE-CH Pre Ch		
	Media Player APP MEDIA Media		
	CD GUIDE Guide		
	Internet Radio SEARCH TV/R TV/R		
	.: :. SHIFT +  Shift + 0		
	Home HOME SMART Smart		
	Stop Stop		
	Pause Pause		
	Play PLAY MODE Play		
	>> >> >>		
	<< << <<		
	>> Tune+ >>  >>		
	I<< Tune- I<< I<<		
	Tv Audio SOUND DUAL Dual		

