



Original	Recharge	Original	Recharge
 Power	 Power	 3	 3
 Tv/Radio	 TV/R	 4	 4
 EPG/Mouse/IR	 Guide	 5	 5
 Play	 Play	 6	 6
 Pause	 Pause	 7	 7
 <</Size	 <<	 8	 8
 >>/Subpage	 >>	 9	 9
 Rec	 Rec	 0	 0
 Stop	 Stop	 Shift + Guide	 Shift + Guide
 I<</FAV	 I<<	 Recall	 Back
 I>>/Index	 I>>	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Hold	 Options	 Mute	 Mute
 Text	 Text	 Ch+	 Ch +
 Subtitle	 Subt	 Ch-	 Ch -
 1	 1	 Red	 Red
 2	 2	 Green	 Green





Original	Recharge
 Yellow	 Yellow
 Blue	 Blue
 Menu	 Menu
 Display	 Info
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Source	 AV
 Smart Tv	 Smart

Original	Recharge

