


 



 



 

 

























 
 






 


 


 





 
 


















 
Original		Rechange		Original		Rechange	
	Standby		Power		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		CH/PG+		Ch +
	6		6		CH/PG-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		TV/STB		Media
	0		0		EPG		Guide
	SAT List		Smart		FAV		Pre Ch
	TV/R		TV/R		Red/Audio		Red
	Menu		Menu		Green/Subt		Green
	Info		Info		Yellow/Text		Yellow
	Back		Back		Blue/Sleep		Blue





Original

Rechange

	Pause		Pause
	Zoom		Eject
	PAL/NTSC		Format
	Option		Options

Original

Rechange

