


 
 
 






 



 












 

 



 
 


 

 

 


 



 


 



 





 



 



 



 

 



 
 
 




Original		Recharge		Original		Recharge	
	VHS/DVD Power		Power		Repeat		Text
	Audio		Dual		I<< Skip		I<<
	VHS/DVD		Smart		Skip >>I		>>I
	1		1		REW / << Slow/Search		<<
	2		2		FF / Slow/Search		>>
	3		3		Stop		Stop
	4		4		Pause / Slow		Pause
	5		5		Play		Play
	6		6		Direct Navigator / Top Menu		D. Menu
	7		7		Play List / Menu		Menu
	8		8		Up		Up
	9		9		Left		Left
	0		0		Enter		Ok
	-/-- / >≡10		Guide		Right		Right
	Cancel / Reset		Exit		Down		Down
	CH+ / Tracking/V-Lock+		Ch +		Display		Info
	CH- / Tracking/V-Lock-		Ch -		Exit / Return		Back



 


 



 



 
 

 




 









 

 



 
 
 

 

 


 



 
 

 

 
















Original		Recharge		Original	Recharge
	AV Enhancer		AV		
	P.Memory		List		
	Play Mode	 + 	Shift + Play		
	Setup		Options		
	Timer	 + 	Shift + AV		
	Music with Picture		Format		
	Rec Check		Rec		
	Group		Vol -		
	A / Zoom		Eject		
	A / Zoom		Red		
	B / Quick Replay		Green		
	Dubbing		Blue		





Original		Recharge		Original		Recharge	
	VHS/DVD Power		Power		ShowView		Media
	Audio		Dual		Input		AV
	VHS/DVD		Smart		I<< Index		I<<
	1		1		Index >>I		>>I
	2		2		REW		<<
	3		3		FF		>>
	4		4		Stop		Stop
	5		5		Pause / Slow		Pause
	6		6		Play		Play
	7		7		Prog Play		List
	8		8		Menu		Menu
	9		9		Up		Up
	0		0		Left		Left
	-/-- / >≡10		Guide		Enter		Ok
	Cancel / Reset		Exit		Right		Right
	CH+ / Tracking/V-Lock+		Ch +		Down		Down
	CH- / Tracking/V-Lock-		Ch -		Display		Info
















Original	Recharge	Original	Recharge
 Exit / Return	 Back		
 Prog/Check	 Sleep		
 I-Timer	 Yellow		
 Off Timer	 Blue		
 Rec Mode	 Shift + Rec		
 Timer	 Shift + AV		
 Music with Picture	 Format		
 Rec. Check	 Options		
 Rec	 Rec		
 Jet Rew	 Shift + <<<		
 A / Ext Link	 Red		
 B / AV Link	 Green		
 Dubbing	 D. Menu		

Original	Recharge





	Original	Recharge	Original	Recharge
	Power			
	AV			
	Volume+			
	Volume-			
	CH+			
	CH-	