






















 


































 


 







Original		Rechange		Original		Rechange	
	RDS ASPM		D.Menu / Top		9		9
	Direct		Info / Angle		0		0
	RDS PTY		Text / Goto		+10		Guide / EPG / -/-
	On Screen		Smart / List		Memory /		Mute / Dimmer
	RDS Display		Setup / OPT /		Zoom		Zoom / Size
	Clear / Display		Display / Media		Subtitle		Subtitle / EQ
	Clear / Display		Exit / Cancel / Clear		Menu		Menu / Home
	On / Stand By		Power		Up / Tuning+		Shift + Tune+ / >> /
	1		1		Up / Tuning+		Up
	2		2		Return		Back / Return
	3		3		Left		Left
	Clock / Timer		Sleep / Timer		Enter		OK
	4		4		Right		Right
	5		5		>> / >> /		>> / Tune+
	6		6		I<< / << / Preset-		I<< / Preset-
	7		7		I<< / << / Preset-		<< / Tune-
	8		8		Down / Tuning-		Shift + Tune- / << /

Tune-





Original	Rechange	Original	Rechange
 Down / Tuning-	 Down	 Dolby VS	 Sound / Title
 >>I / >> /	 >>I / Preset+	 Volume-	 Vol-
 USB Play/Pause	 Pause / Step / Freeze	 Volume+	 Vol+
 Slow	 Shift + Play /		
 DVD/CD	 Play / Slow		
 Stop	 Stop / Hold		
 Still	 Shift + Pause / Step /		
 DVD/CD	 Shift + 2		
 DVD/CD	 Shift + 3		
 DVD/CD	 Green / APP / Repeat		
 USB	 Shift + 8		
 USB	 Blue / Prime Video / Random		
 AUX	 Shift + 7		
 AUX	 Red / Netflix / Search		
 TUNER	 Shift + 6		
 TUNER	 Yellow / YouTube / Repeat		
 Audio	 Audio / Lang I/II		

