



 
 
 
 


 
 
 

 


 
 




 
 
 
 

 









	Original	Recharge		Original	Recharge
	Power		Power		EPG
	Mute		Mute		Menu
	Format		Format		Info
	SAT		Smart		Up
	TV/STB		Media		Down
	TV/Radio		TV/R		Right
	1		1		Left
	2		2		OK
	3		3		Vol+
	4		4		Vol-
	5		5		Exit
	6		6		CH+ / >> I
	7		7		CH- / I <<
	8		8		Red/Text
	9		9		Green/Audio
	0		0		Yellow/Sub.T
	Back		Back		Blue/Find

	Guide		Red
	Menu		Green
	Info		Yellow
	Up		Blue
	Down		
	Right		
	Left		
	Ok		
	Vol +		
	Vol -		
	Exit		
	Ch +		
	Ch -		
	Red		
	Green		
	Yellow		
	Blue		





	Original	Recharge	Original	Recharge
	Edit	 3D		
	OPT	 Options		
	USB/PVR	 AV		
	FAV	 Pre Ch		
	<<	 <<		
	Play	 Play		
	Pause	 Pause		
	>>	 >>		
	Stop	 Stop		
	Pg Down	 I<<		
	Pg Up	 >>I		
	Rec	 Rec		

