



Original	Recharge	Original	Recharge
Power Receiver	Power	3 Tuner	Shift + 3
DVD	2	HDMI Out	AV / Input / RDS
BD	1	4 Tuner	Shift + 4
DVR	5	Signal Sel	Shift + Setup / OPT / Tools
HDMI	0	MCACC	Fav / Marker / PC
TV	TV/Radio /	5 Tuner	Shift + 5
CD	3	6 Tuner	Shift + 6
CD-R	9	Sleep	Sleep / Timer
Home Media	Shift + Menu /	7 Tuner	Shift + 7
iPod / USB	8	SBch	Eject / Surround
Tuner	6	8 Tuner	Shift + 8
Video 1	4	A.ATT.	Yellow / YouTube / Repeat
Video 2	7	9 Tuner	Shift + 9
↶ Input Select	Shift + Left	Dimmer	Shift + Mute / Dimmer
1 Tuner	Shift + 1	D.Access	Shift + D.Menu / Top Menu
Input Select ↷	Shift + Right	CH Level	Shift + CH+ /
2 Tuner	Shift + 2	0 Tuner	Shift + 0





Original	Rechange
Class	Shift + Display / Media
Enter (Class)	Shift + OK
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + << / Preset-
Enter	OK
Preset +	Shift + >> / Preset+

Original	Rechange
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /
Down	Down
Return	Back / Return
Auto / Alc / Direct	Info / Angle
Stereo	Sound / Title
Repeat	Green / APP / Repeat
Standard	Shift + Smart / List
Random	Blue / Prime Video / Random
Adv. Surr.	Guide / EPG / -/-
<<	<< / Tune-
Phase CTRL	Red / Netflix / Search
Play	Play / Slow
>>	>> / Tune+
Status	Exit / Cancel / Clear





	Original	Rechange		Original	Rechange
	I<<	I<< / Preset-			
	Pause	Pause / Step / Freeze			
	MPX	Zoom / Size			
	PQLS	Shift + Info / Angle			
	Stop	Stop / Hold			
	>>I	>>I / Preset+			
	Audio DVD	Shift + Audio / Lang I/II			
	Disp	Display / Media			
	CH -	CH- / Page-			
	CH +	CH+ / Page+			

	Original	Rechange

























 







 
 
Original	Recharge
Power Source	Power
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Top Menu	D.Menu / Top
Up	Up
Left	Left
Enter	Shift + OK
Enter	OK

Original	Recharge
Right	Right
Down	Down
Return	Back / Return
Menu	Menu / Home
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
Audio	Audio / Lang I/II





Original	Rechange
 Power Source	 Power
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 D.Access	 D.Menu / Top
 0	 0
 Class	 CH- / Page-
 Master Volume	 Vol+
 Master Volume	 Vol-
 Mute	 Mute / Dimmer

Original	Rechange
 Band	 Smart / List
 Tune+	 >> / Tune+
 Tune+	 Up
 T.Edit	 Text / Goto
 Preset-	 Left
 Preset-	 I<< / Preset-
 Enter	 OK
 Preset+	 >>I / Preset+
 Preset+	 Right
 Search	 Red / Netflix / Search
 Tune-	 << / Tune-
 Tune-	 Down
 Menu	 Menu / Home
 MPX	 CH+ / Page+
 Disp	 Display / Media

