






 
 

 
 


























Original	Recharge
 Standby / On	 Power
 INPUT NEXT	 Ch +
 INPUT PREV.	 Ch -
 D.Access	 Red
 PQLS	 3D
 BD	 Shift + 1
 DVD	 Shift + 2
 BDR / BDR	 Shift + 3
 HDMI	 Shift + 4
 TV	 Shift + 5
 CD	 Shift + 6
 NET	 Shift + 7
 ADPT	 Shift + 8
 iPod / USB	 Shift + 9
 SAT / CBL	 Shift + Guide
 TUNER	 Shift + 0
 i / Status	 Info

Original	Recharge
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Audio	 Media
 Video	 Smart
 Tools Menu	 Options
 Home Menu	 Menu
 iPod Ctrl.	 D. Menu
 Return	 Back
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Features PHASE	 Shift + 3D
 MPX	 Shift + Pause
 Pause	 Pause





	Original	Rechange		Original	Rechange
	BAND	+ Shift + Play		3	3
	Play	Play		4	4
	PTY	+ Shift + Stop		Signal Sel.	AV
	Stop	Stop		MCACC	Eject
	Preset -	+ Shift + I<<		5	5
	I<<	I<<		6	6
	Preset+	+ Shift + >>I		CH. Level	Guide
	>>I	>>I		7	7
	Tune-	+ Shift + <<		Speakers	List
	<<	<<		Dimmer	Blue
	Tune+	+ Shift + >>		8	8
	>>	>>		9	9
	Auto / ALC /	TV/R		Sleep	Sleep
	1	1		0	0
	Standard	Format		Class	Yellow
	2	2		DISP	+ Shift + Info
	Adv. Surr.	Subt		+ Favorite	Pre Ch





Original		Rechange		Original		Rechange	
	Audio		Dual				
	Auto S.RTRV		Exit				
	Repeat		Shift + Text				
	Shuffle		Text				

