




 
 

 




 

 


 
 

 

 


 


 



 








 
 
 
 










	Original	Rechange	Original	Rechange
	Power			0
	Open/Close			Return
	Band			XTS Pro
	DVD			Marker
	AUX			Search
	USB			O)))/Audio
	Sleep			Sound
	Dimmer			[...]/Subtitle
	1			VSM
	2			Setup
	3			Display
	4			Up
	5			Preset+
	6			Down
	7			Preset-
	8			Right/Tun.+
	9			Left/Tun-
				Shift + Dual
				Subt
				Smart
				Options
				Info
				Up
				Ch +
				Down
				Ch -
				Right
				Left



