



| Original | Recharge |
|--------------|------------------|
| Off | Shift + Power |
| On | Power |
| Mute | Mute / Dimmer |
| AVR | Smart / List |
| DVD | Shift + 2 |
| CD | Shift + 3 |
| Tape | Shift + 5 |
| VID1/VCR | Shift + 4 |
| VID2/TV | Shift + 1 |
| VID3/CBL/SAT | Shift + 0 |
| VID4 | Shift + 7 |
| AM/FM | Shift + 6 |
| 6 CH | Shift + 8 |
| Sleep | Sleep / Timer |
| Test | Text / Goto |
| Vol+ | Vol+ |
| Surr. | Eject / Surround |

| Original | Recharge |
|--------------|---------------|
| Night | TV/Radio / |
| M-Room | Zoom / Size |
| Vol- | Vol- |
| CH. | Info / Angle |
| Up | Up |
| SPKR/Menu | Menu / Home |
| Left | Left |
| Set | OK |
| Right | Right |
| Digital | D.Menu / Top |
| Down | Down |
| Delay/Normal | Setup / OPT / |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |





| Original | Recharge |
|--------------|---------------|
| Power Off | Shift + Power |
| Power On | Power |
| Vol+ | Vol+ |
| Night | TV/Radio / |
| [≡] / M-Room | Zoom / Size |
| Vol- | Vol- |
| CH. | Info / Angle |
| Up | Up |
| SPKR/Menu | Menu / Home |
| Left | Left |
| Set | OK |
| Right | Right |
| Digital/Exit | D.Menu / Top |
| Down | Down |
| Delay/Normal | Setup / OPT / |
| 1 | 1 |
| 2 | 2 |

| Original | Recharge |
|---------------|-------------------------------|
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| Tun-M | Red / Netflix / Search |
| 9 | 9 |
| 0 | 0 |
| Mem | Green / APP / Repeat |
| Direct | Back / Return |
| Clear | Exit / Cancel / Clear |
| Preset ▲ | Shift + >>I / Preset+ |
| RDS | AV / Input / RDS |
| Preset ▼ | Shift + I<< / Preset- |
| << icon"/> << | << / Tune- icon"/> << / Tune- |
| Play | Play / Slow |





| Original | | Recharge | | Original | | Recharge | |
|----------|--------------|----------|------------------------|----------|------------------|----------|-----------------------|
| | Power On | | Power | | Mem | | Green / APP / Repeat |
| | Power Off | | Shift + Power | | RDS | | AV / Input / RDS |
| | Vol- | | Vol- | | >> | | >> / Tune+ |
| | Vol+ | | Vol+ | | << | | << / Tune- |
| | SPKR/Menu | | Menu / Home | | Play | | Play / Slow |
| | 1 | | 1 | | Stop | | Stop / Hold |
| | Delay/Normal | | Setup / OPT / | | Direct | | Back / Return |
| | 2 | | 2 | | Pause | | Pause / Step / Freeze |
| | 3 | | 3 | | Preset ▲ | | CH+ / Page+ |
| | 4 | | 4 | | >>I | | >>I / Preset+ |
| | 5 | | 5 | | I<< | | I<< / Preset- |
| | 6 | | 6 | | Power (On / Off) | | Mute / Dimmer |
| | 7 | | 7 | | PR+ VCR | | Shift + CH+ / |
| | 8 | | 8 | | PR- VCR | | Shift + CH- / |
| | 9 | | 9 | | Vol- VCR | | Shift + Vol- |
| | 0 | | 0 | | Vol+ VCR | | Shift + Vol+ |
| | Tun-M | | Red / Netflix / Search | | 1 VCR | | Shift + 1 |



