











 



















 

 







Original	Rechange
	 Power
	 Mute / Dimmer
	 Sound / Title
	 Audio / Lang I/II
	 Subtitle / EQ
	 Picture / Format
	 Zoom / Size
	 Sleep / Timer
	 D.Menu / Top
	 Setup / OPT /
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 OK

Original	Rechange
	 Right
	 Exit / Cancel / Clear
	 Down
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4
	 6
	 Shift + Power
	 Shift + Mute / Dimmer
	 Shift + Sound / Title






























 







 

 



 

 

























Original	Rechange
Stereo	Shift + Audio / Lang I/II
Night	Shift + Sleep / Timer
Input Up	Shift + Up
CH Sel	Shift + OK
Input Down	Shift + Down
Bass+	Shift + Vol+
DSS	Shift + Smart / List
Treble+	Shift + CH+ /
Bass-	Shift + Vol-
HT EQ	Shift + Display / Media
Treble-	Shift + CH- /
AUX2	Shift + 2

Original	Rechange













Original	Rechange	Original	Rechange
	Power		Power
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Audio		Audio / Lang I/II
	Volume-		Vol-
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Memo		Smart / List
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	CH-		CH- / Page-
	CH+		CH+ / Page+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8
























Original	Recharge	Original	Recharge
	9		9
	CLR		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/--

Original	Recharge





Original	Recharge	Original	Recharge
Power		Power	
Mute		Mute / Dimmer	
Tune-		<< / Tune-	
Tune+		>> / Tune+	
Preset-		<< / Preset-	
Preset+		>> / Preset+	
Band		Sound / Title	
PTY		Picture / Format	
T.Mode		D.Menu / Top	
Menu		Menu / Home	
Info		Info / Angle	
Enter		OK	
Volume+		Vol+	
Memo		Smart / List	
Volume-		Vol-	
Display		Display / Media	
1		1	

Original	Recharge	Original	Recharge
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	

