







 







 
 
 


 
 




 









 
 


 



Original		Rechange		Original		Rechange	
	Standby/On		Power		Navigation		Pre Ch
	Open/Close		Eject		Menu		Menu
	TV		TV/R		Setup		Options
	DV		Smart		Title		List
	AV		AV		Up		Up
	Scan		Media		Down		Down
	1		1		Select		Ok
	2		2		Right		Right
	3		3		Left		Left
	4		4		Rec/OTR		Rec
	5		5		Edit		Guide
	6		6		Timer		Shift + AV
	7		7		Play		Play
	8		8		Stop		Stop
	9		9		Pause/Step		Pause
	0		0		Mute		Mute
	ADD/Clear		Exit		CH+		Ch +





Original		Rechange	
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Disc Oper		Blue
	Return		Back
	Repeat		Text
	Zoom		Shift + Eject
	Slow		Shift + Play
	Display		Info
	Prog		Sleep

Original		Rechange	
	Random		Yellow
	PS/IS		Format
	Goto		3D

