
 


 



 

 

 
 

 

 

 

 

 















 


 





 
 





 






Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 3D Sound	 Sound / Title
 Dolby PL II	 Audio / Lang I/II
 S/W Level	 Subtitle / EQ
 Eject	 Eject / Surround
 Full Screen	 Zoom / Size
 Sleep	 Sleep / Timer
 Function	 TV/Radio /
 Disc Menu	 D.Menu / Top

Original	Rechange
 Tools	 Setup / OPT /
 vTuner	 Text / Goto
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Vol +	 Vol+
 Smart Hub	 Smart / List
 Tuning / CH +	 CH+ / Page+
 Vol -	 Vol-
 DSP	 Display / Media
 Tuning / CH -	 CH- / Page-







Original		Rechange		Original		Rechange	
	Power		Power		Stop		Stop / Hold
	TV Source		AV / Input / RDS		Play		Play / Slow
	Sleep		Sleep / Timer		Pause		Pause / Step / Freeze
	1		1		Vol+		Vol+
	2		2		Mute		Mute / Dimmer
	3		3		CH+		CH+ / Page+
	4		4		Vol-		Vol-
	5		5		CH-		CH- / Page-
	6		6		Menu		Menu / Home
	7		7		Tools		Setup / OPT /
	8		8		Up		Up
	9		9		Info		Info / Angle
	0		0		Left		Left
	I<<		I<< / Preset-		Enter		OK
	>>I		>>I / Preset+		Right		Right
	<<		<< / Tune-		Return		Back / Return
	>>		>> / Tune+		Down		Down



