








 
 









 




 



 







 
 
 
 

 
 



 

 
 

 
 




	Original	Recharge		Original	Recharge
	Power		Power		Tv Display
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Enter
	5		5		Vol+
	6		6		Vol-
	7		7		S.M.
	8		8		P.M.
	9		9		CH+
	0		0		CH-
	.	 + 	Shift + Guide		EPG Page Up
	Recall		Back		EPG Page Down
	Menu		Menu		Sleep
	Source		AV		P.G.
	Exit		Exit		Aspect
					Info
					Up
					Down
					Right
					Left
					Ok
					Vol +
					Vol -
					Smart
					Media
					Ch +
					Ch -
				 + 	Shift + Up
				 + 	Shift + Down
					Sleep
					Format
					3D





Original		Recharge		Original		Recharge	
	CH List		List				
	EPG		Guide				
	FAV		Pre Ch				
	DTV Strenght		D. Menu				
	TV		TV/R				
	AV		Eject				
	HDMI		Text				
	YPbPr		Shift + Format				
	CC		Subt				
	MTS/SAP		Dual				
	VGA		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

