

 









 




 
 

 
 








 
 

 
 

 


 
 

 

 



 

 
 




	Original	Rechange		Original	Rechange
	Power		Power		Pause
	Function		Smart		Stop
	1		1		>>
	2		2		<<
	3		3		Album Up
	4		4		Album Down
	5		5		Enter
	6		6		Sleep
	7		7		Repeat
	8		8		Play Mode
	9		9		Shift + Play
	0/10		0		Clock Timer Set
	+10		Guide		Clock Timer
	Disc Skip		Blue		Clear
	Preset >>I		>>I		Vol+
	I<< Preset		I<<		Vol-
	Play/<>		Play		Edit
					Band



