




 

 





 
 








 





 




Original	Rechange
 Standby	 Power
 Open / Close	 Eject
 Video	 AV
 Mark	 Pre Ch
 Prog	 Sleep
 Clear	 Exit
 Goto	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 10+	 Guide
 Lang / R/L	 Dual
 Angle	 Format
 Sub-T	 Subt
 Title	 List
 Menu / PBC	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Setup	 Options
 Vol / Key	 Media
 Zoom	 Shift + Eject
 <<	 <<
 >>	 >>
 Play / Pause	 Play





Original		Rechange		Original	Rechange
	Play / Pause		Pause		
	Stop / Return		Stop		
	Stop / Return		Back		
	I<<		I<<		
	>>I		>>I		
	Digest		Red		
	OSD		Info		
	N/P		Green		
	Random		TV/R		
	A-B		D. Menu		
	Repeat		Text		
	Step	+	Shift + Pause		
	Slow	+	Shift + Play		
	3D		3D		
	Mute		Mute		
	Vol+		Vol +		
	Vol-		Vol -		

