






 
 



Original	Recharge	Original	Recharge
Power ON/Off	 Power		
Tape 1 Preset	 Up		
Tape 1 Stop	 Down		
CD Play	 Play		
CD Rewind	 <<		
Tape 1 F.FWD	 Right		
Tape 1 Play	 Ok		
Tape 1 Rew	 Left		
CD Pause	 Pause		
CD F.FWD	 >>		
Stop	 Stop		

