







 
 


Original	Rechange	Original	Rechange
 Power	 Power	 4	 4
 Eject	 Eject	 5	 5
 Red	 Red	 6	 6
 Green	 Green	 7	 7
 Yellow	 Yellow	 8	 8
 Blue	 Blue	 9	 9
 Subtitle	 Subt	 0	 0
 Audio	 Dual	 Clear	 Exit
 Angle	 List	 Search	 Shift + TV/R
 Zoom	 Shift + Eject	 Pure Direct	 Format
 Status	 TV/R	 CD Mode	 Text
 Setup	 Options	 Top Menu	 Shift + Menu
 Miracast	 Media	 Pop-Up Menu	 Menu
 Home	 Smart	 Return	 Back
 1	 1	 On-Screen	 Info
 2	 2	 Up	 Up
 3	 3	 Down	 Down





Original	Rechange	Original	Rechange
 Right	 Right	 Shuffle	 D. Menu
 Left	 Left	 Repeat	 Shift + Text
 Enter	 Ok	 A-B	 Pre Ch
 Stop	 Stop	 Dimmer	 Guide
 Pause	 Pause	 SA-CD/CD	 AV
 Play	 Play		
 <<1	 Shift + Left		
 1>>	 Shift + Right		
 <<	 <<		
 >>	 >>		
 >>1	 >>1		
 1<<	 1<<		
 PIP	 3D		
 2nd Audio	 Shift + Dual		
 Page+	 Ch +		
 Page-	 Ch -		
 Program	 Sleep		

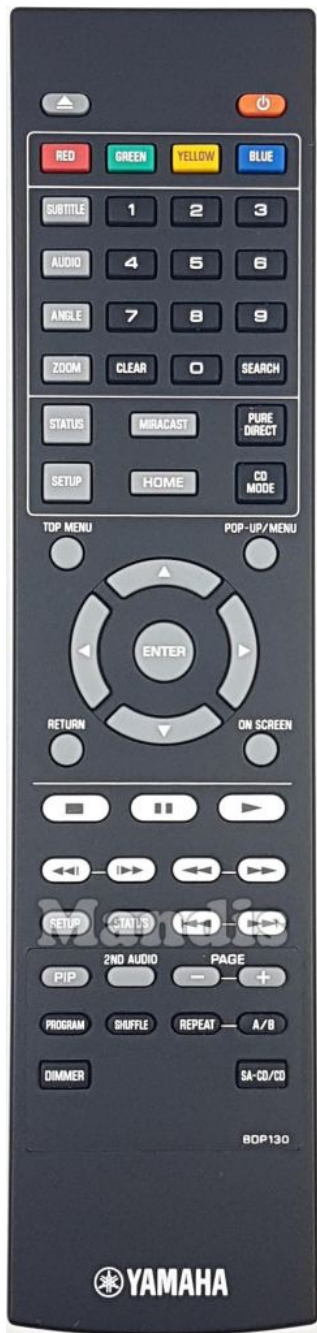