














 
 



 



 


 








Original	Recharge	Original	Recharge
On/Off	 Power	Menu Left	 Left
Repeat/1/All	 Text	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Slow Up	 Ch +	Menu Down	 Down
Stop	 Stop	Volume+	 Vol +
Auto/Track	 Media	Progr.	 Sleep
Pause	 Pause	Next	 >>
Subt.	 Subt	Volume-	 Vol -
Rep/A-B	 Blue	Top Menu	 D. Menu
Title	 List	Prev.	 <<
Menu	 Menu	1	 1
Repeat/1/All	 Yellow	2	 2
Menu Up	 Up	3	 3
Zoom	 Shift + Eject	4	 4
DVD/TV	 Smart	5	 5
Display	 Info	6	 6



Original	Recharge	Original	Recharge
7	 7	Echo+	 Shift + Ch +
8	 8	Input Source	 AV
9	 9	Audio	 Dual
+10	 Guide	Echo-	 Shift + Ch -
0	 0	Digest	 3D
C/CH	 Pre Ch	Angle	 Red
Record	 Rec	Random	 Green
Rewind	 <<	Lang	 Shift + Dual
Resume	 Shift + Play		
Play	 Play		
Karaoke/Step	 Shift + Pause		
Game	 TV/R		
F.Forward	 >>		
Remain	 Format		
Timer	 Shift + AV		
Open/Close	 Eject		
Setup	 Options		

