 



 












 










 


 

 


 

 








 


 


 
 




 



 






 


 




Original		Recharge		Original		Recharge	
	Power		Power		Scene 4		Blue
	Standby		Shift + Power		Level		D. Menu
	Multi CH In		Smart		Menu		Menu
	Audio Sel		Media		Up		Up
	Sleep		Sleep		Down		Down
	Mute		Mute		Right		Right
	CD		2		Left		Left
	MD/CD-R		3		Enter		Ok
	TUNER		4		Return		Back
	DVD		5		Display		Info
	DTV/CBL		6		Volume+		Vol +
	DVR		7		Volume-		Vol -
	V-AUX		8		Prog-		Ch -
	USB		1		Prog+		Ch +
	Scene 1		Red		Enhancer		Shift + 1
	Scene 2		Green		Straight		Shift + 3
	Scene 3		Yellow		Sur. Decode		Shift + 2





 
 
 

 



 
 
 
 
 


 

 
 
 


 









 




 

 




 







 



Original	Recharge
 Night	 +  Shift + 5
 Direct ST	 +  Shift + 4

Original	Recharge









 

 

 
 
 





 
 





 
 

 
 


 










 

 







 
 

 
 


 
 






Original		Rechange		Original		Rechange	
	Power AV		Power		1		1
	Mute		Mute		2		2
	Band		Smart		3		3
	Menu		Menu		4		4
	Preset+		Up		5		5
	Preset-		Down		6		6
	A/B/C/D/E+		Right		7		7
	A/B/C/D/E-		Left		8		8
	Enter		Ok		9		9
	Return		Back		0		0
	Display		Info		ENT		Pre Ch
	Volume+		Vol +				
	Volume-		Vol -				
	Freq / Text		Text				
	EON		Media				
	PTY SEEK Mode		Ch -				
	PTY SEEK Start		Ch +				









 

 

 
 


 










 


 
 


 



 










 




 

 

 
 


 
 






Original		Rechange		Original		Rechange	
	Power AV		Power		<<		<<
	Mute		Mute		>>		>>
	Title		Smart		<<		<<
	Menu		Menu		>>		>>
	Up		Up		1		1
	Left		Left		2		2
	Enter		Ok		3		3
	Right		Right		4		4
	Down		Down		5		5
	Return		Back		6		6
	Display		Info		7		7
	Volume+		Vol +		8		8
	Volume-		Vol -		9		9
	Rec		Rec		0		0
	Stop		Stop		+10		Guide
	Pause		Pause		ENT		Pre Ch
	Play		Play				





Original		Rechange		Original		Rechange	
	Power AV		Power		<<		<<
	Mute		Mute		>>		>>
	Title		Smart		<<		<<
	Menu		Menu		>>		>>
	Up		Up		1		1
	Left		Left		2		2
	Enter		Ok		3		3
	Right		Right		4		4
	Down		Down		5		5
	Return		Back		6		6
	Display		Info		7		7
	Volume+		Vol +		8		8
	Volume-		Vol -		9		9
	Rec		Rec		0		0
	Stop		Stop		+10		Guide
	Pause		Pause		ENT		Pre Ch
	Play		Play				

