



Original	Rechange
 Power	 Power
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 CH Sel	 TV/R
 CH/Level Up	 Ch +
 CH/Level Down	 Ch -
 SPK SET	 Exit
 PLII PARA.	 D. Menu
 Adjust -	 Shift + Down
 Adjust +	 Shift + Up
 Mute	 Mute

Original	Rechange
 Vol+	 Vol +
 Vol-	 Vol -
 Auto	 Subt
 DSP -	 Shift + Left
 DSP +	 Shift + Right
 Stereo	 Dual
 Setup / OSD	 Options
 Menu / T.Tone	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display / Sleep	 Info
 Display / Sleep	 Sleep
 Return /	 Back
 Stop / P.Scan	 Stop










 



 

 
 
 

 


 

 



 

 

 


 
 












 

 

 





 



 



 


 



 

Original		Rechange		Original		Rechange	
	AUDIO		Red		TV 3		3
	CD		Green		TV 4		4
	AUX		Yellow		TV 5		5
	TV		Blue		TV 6		6
	VCR		Shift + Red		TV 7		7
	DVD		Shift + Green		TV 8		8
	CABLE		Shift + Yellow		TV 9		9
	SAT		Shift + Blue		TV 0		0
	TV Power		Power		CABLE Power		Shift + Power
	TV CH +		Ch +		CABLE CH/Level +		Shift + Ch +
	TV CH -		Ch -		CABLE CH/Level -		Shift + Ch -
	TV CH Sel.		Media		CABLE CH Sel.		Shift + Smart
	TV Mute		Mute		CABLE Mute		Shift + Mute
	TV Volume +		Vol +		CABLE Volume		Shift + Vol +
	TV Volume -		Vol -		CABLE Volume -		Shift + Vol -
	TV 1		1		CABLE 1		Shift + 1
	TV 2		2		CABLE 2		Shift + 2










 




 
 





 
 


 
 

 
 



 














 




 



 



 
 


 
 
Original	Rechange	Original	Rechange
 AUDIO	 Red	 DVD Right	 Right
 CD	 Green	 DVD Down	 Down
 AUX	 Yellow	 DVD Display	 Info
 TV	 Blue	 DVD Pause	 Pause
 VCR	 Shift + Red	 DVD Play	 Play
 DVD	 Shift + Green	 DVD Stop	 Stop
 SAT	 Shift + Blue	 DVD <<	 <<
 CABLE	 Shift + Yellow	 DVD >>	 >>
 DVD Power	 Power	 DVD I<<	 I<<
 DVD Menu	 Menu	 DVD >>I	 >>I
 DVD Audio Sel.	 Dual	 DVD 1	 1
 DVD Subtitle	 Subt	 DVD 2	 2
 DVD Zoom	 3D	 DVD 3	 3
 DVD OSD /	 Format	 DVD 4	 4
 DVD Up	 Up	 DVD 5	 5
 DVD Left	 Left	 DVD 6	 6
 DVD Enter	 Ok	 DVD 7	 7









Original		Rechange		Original		Rechange	
	AUDIO		Red		CD 5		5
	CD		Green		CD 6		6
	AUX		Yellow		CD 7		7
	TV		Blue		CD 8		8
	VCR		Shift + Red		CD 9		9
	SAT		Shift + Blue		CD 0		0
	CABLE		Shift + Yellow		VCR Power		Shift + Power
	DVD		Shift + Green		VCR CH Sel.		Shift + Media
	CD Pause		Pause		VCR Rec		Shift + Rec
	CD Play		Play		VCR Play		Shift + Play
	CD Stop		Stop		VCR Mute		Shift + Mute
	CD I<<		I<<		VCR >>		Shift + >>
	CD >>I		>>I		VCR <<		Shift + <<
	CD 1		1		VCR Volume -		Shift + Vol -
	CD 2		2		VCR Volume +		Shift + Vol +
	CD 3		3		VCR CH+		Shift + Ch +
	CD 4		4		VCR CH-		Shift + Ch -



