

 


 



 

 













 





 

 




|   | Original     | Rechange  | Original  | Rechange     |
|---|--------------|---|---|--------------|
|    | Power        |    |  | Play / Pause |
|    | Mute         |    |  | Pause        |
|    | USB          |    |   |              |
|    | BT           |    |   |              |
|    | AUX          |    |   |              |
|    | SD           |    |   |              |
|    | Line In      |    |   |              |
|    | Vol+         |    |   |              |
|    | Vol+         |    |   |              |
|   | Vol-         |   |   |              |
|  | Vol-         |  |   |              |
|  | >>I          |  |   |              |
|  | >>I          |  |   |              |
|  | I<<          |  |   |              |
|  | I<<          |  |   |              |
|  | Play / Pause |  |   |              |
|  | Play / Pause |  |   |              |

